


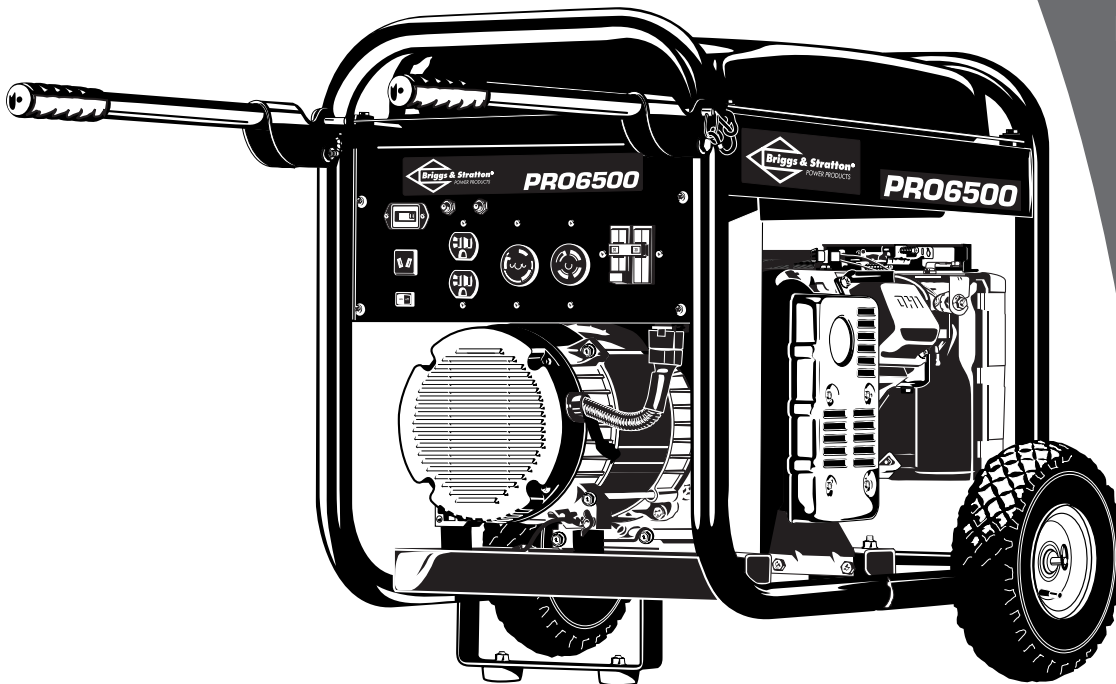

PORTABLE GENERATOR GÉNÉRATEUR PORTATIF GENERADOR PORTÁTIL

Model / Modèle / Modelo

PRO6500
01933



Illustrated Parts List

Questions? Help is just a moment away!

Call: Generator Helpline -
1-800-743-4115 M-F 8-5 CT

Les Parties illustrées Enumèrent

Vous avez des questions?
Vous n'avez pas besoin d'aller loin
pour trouver de l'aide!

Appelez: Ligne d'assistance de
Générateur - 1-800-743-4115
M-F 8-5 CT

Las Partes ilustradas Listan

Preguntas? La ayuda es justa un momento lejos!




Llamada: Generador Helpline -
1-800-743-4115 M-F 8-5 CT

BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.


IPL No. 193168GS
Revision 2 (08/12/2003)




SCHEMATIC

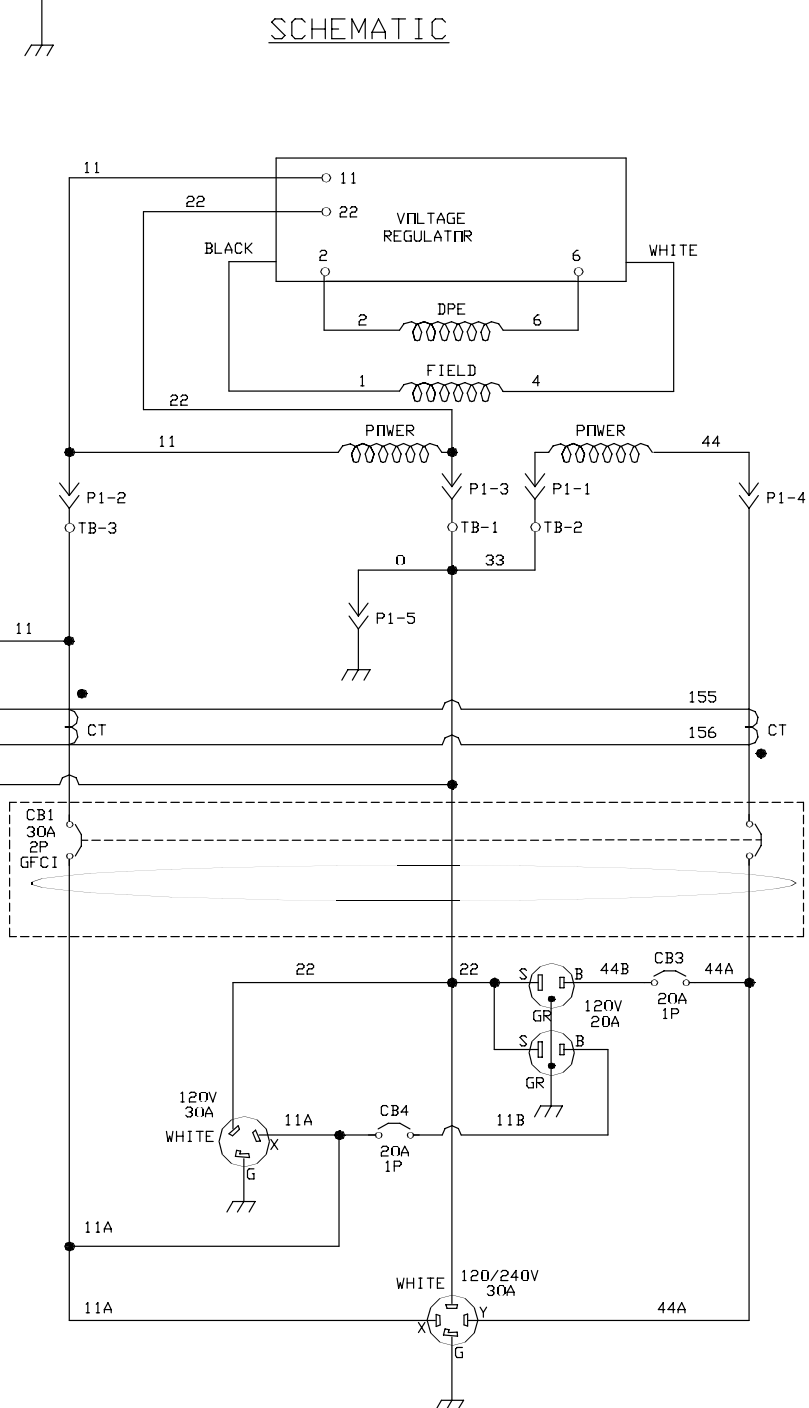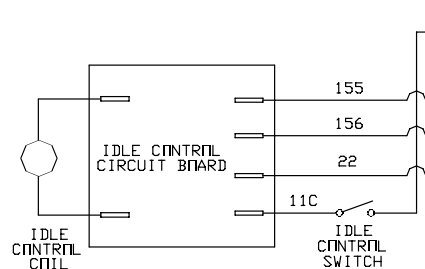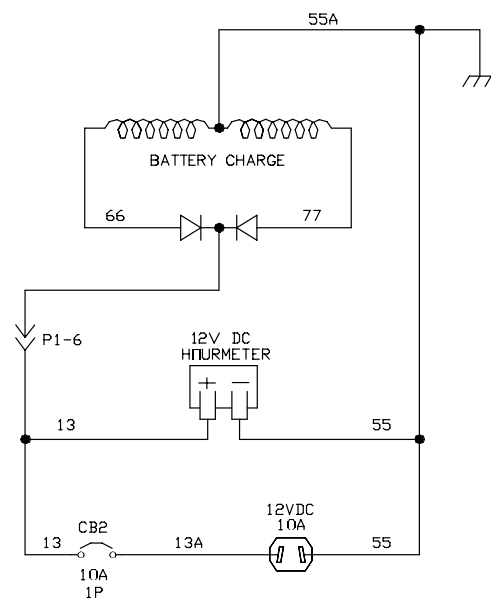

WIRING DIAGRAM

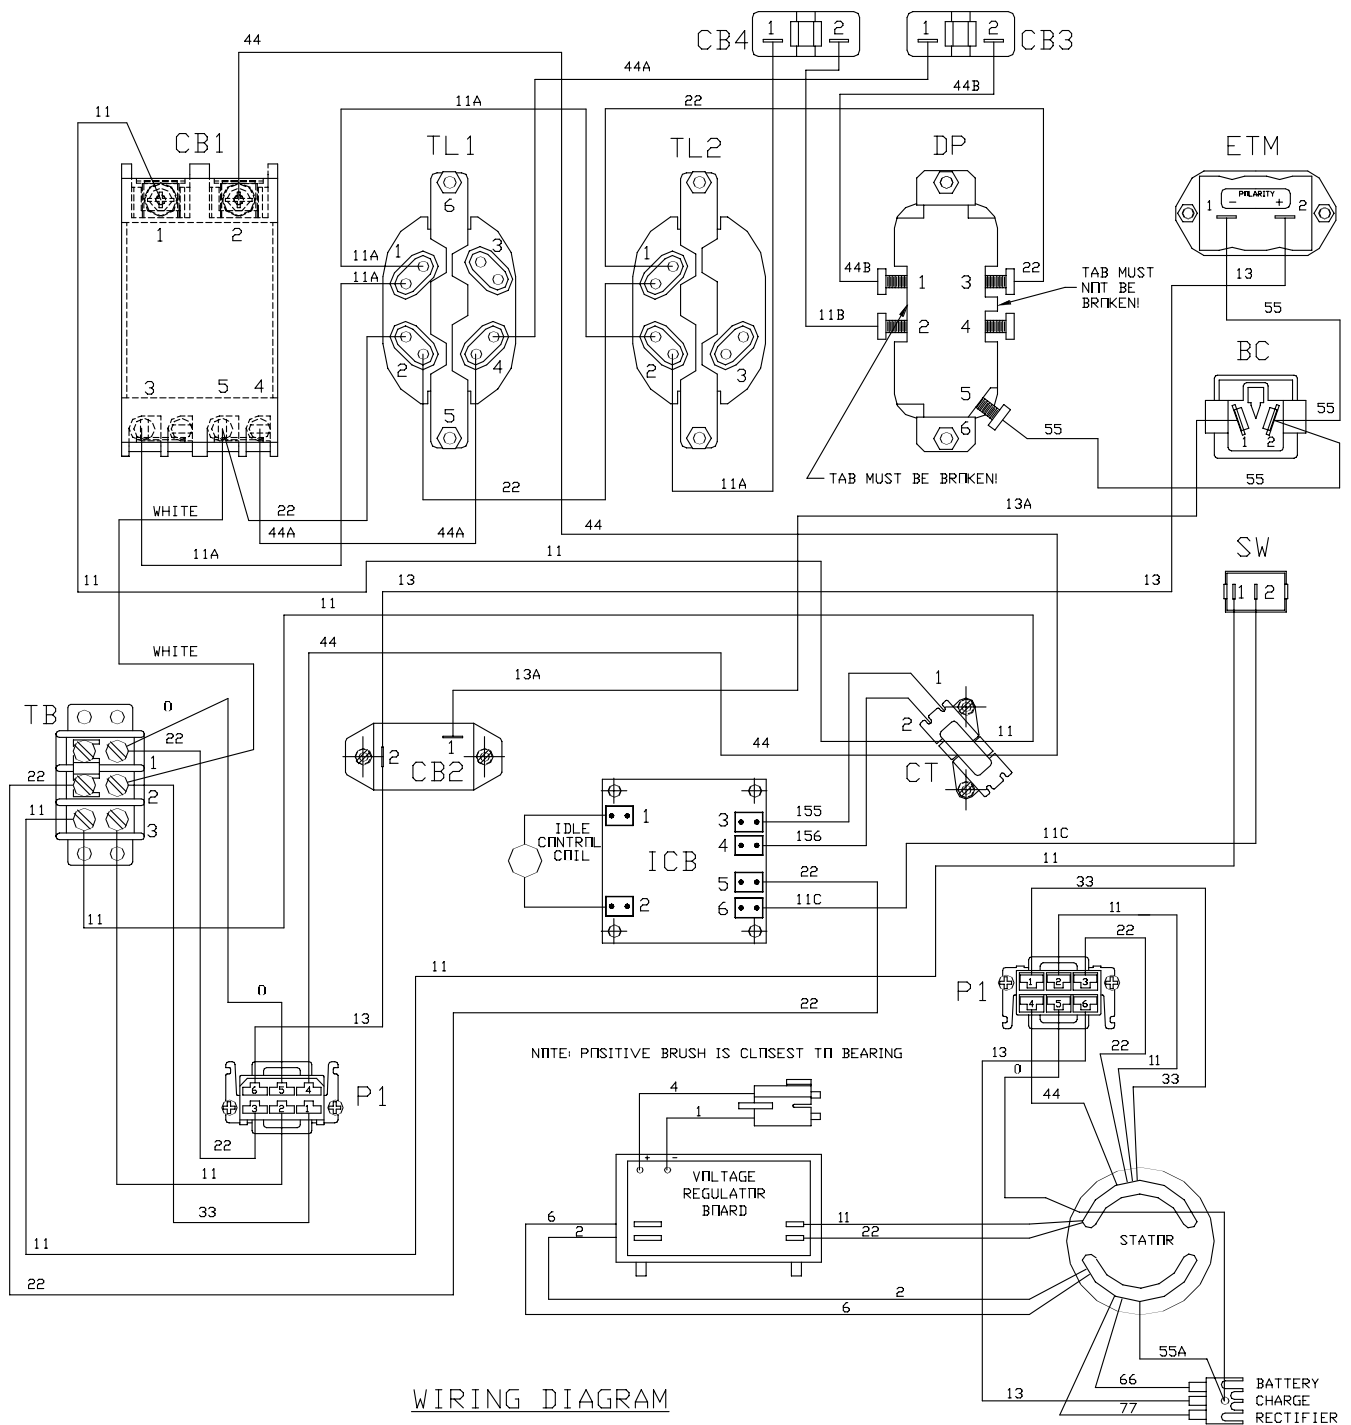

EXPLODED VIEW - MAIN UNIT

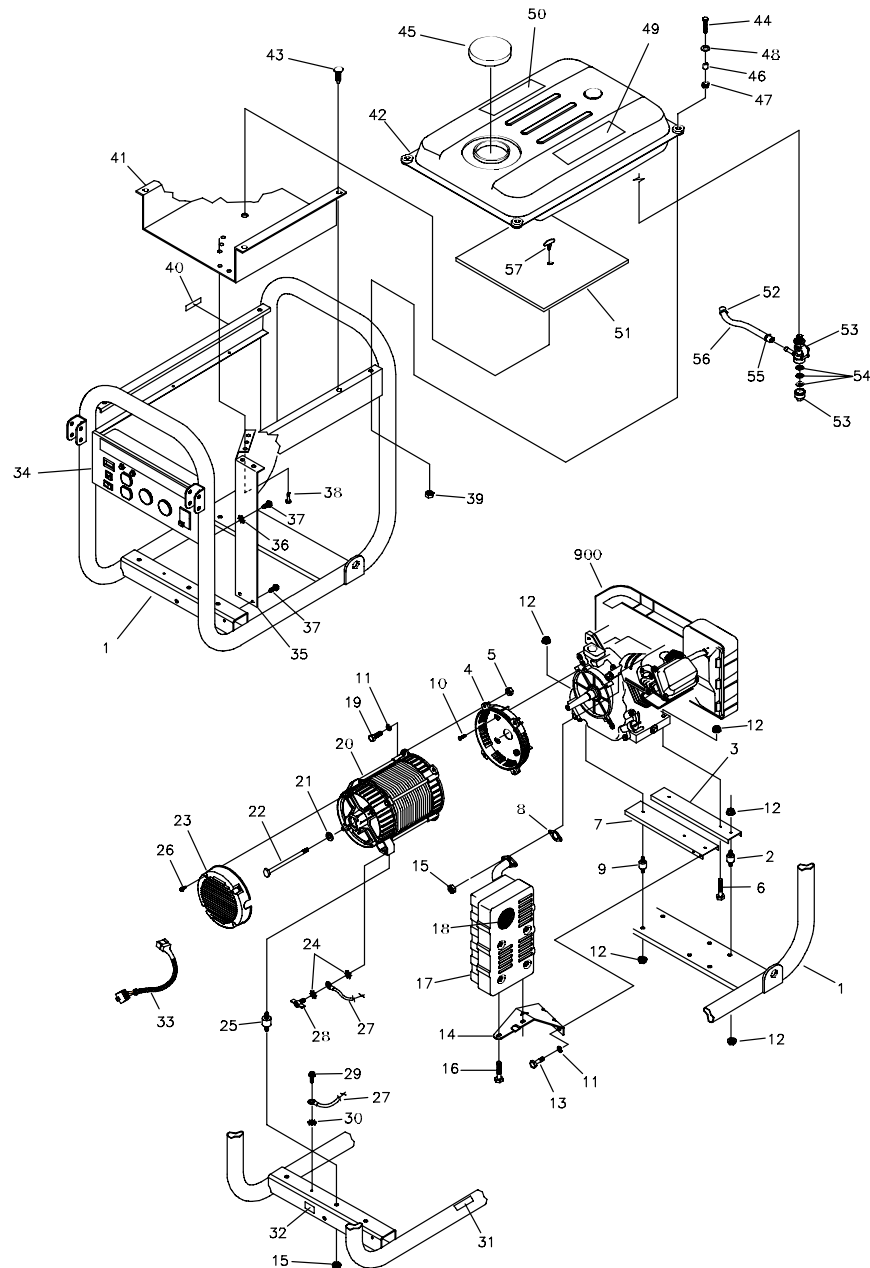


PARTS LIST - MAIN UNIT

Item	Part #	Description	Item	Part #	Description
1	B192958GS	CRADLE	36	22447GS	WASHER
2	82857GS	MOUNT,Vibration	37	192376GS	SCREW
3	B92531GS	SUPPORT, Engine	38	56893GS	SCREW
4	190220GS	HOUSING, Engine Adapter	39	52858GS	NUT, Lock
5	45771GS	NUT	40	191545GS	DECAL, Fuel Shut-off
6	22531GS	SCREW	41	J192981GS	SHIELD, Heat
7	B190723GS	SUPPORT, Eng/Muffler	42	193299GS	ASSY,Tank, Fuel (Includes Items 49, 50 & 53)
8	710250	GASKET, Muffler	43	B1797GS	CLIP,Tree
9	92609GS	MOUNT,Vibration	44	43107GS	SCREW
10	190274BGS	SCREW	45	189135GS	CAP, Fuel
11	22129GS	WASHER, Lock	46	189137GS	SPACER
12	189160GS	NUT	47	189134GS	GROMMET, Rubber
13	22142GS	SCREW	48	22145GS	WASHER
14	92532GS	BRACKET, Muffler	49	92982GS	DECAL, Danger
15	67989GS	NUT	50	189235GS	DECAL, Start Instructions
16	66476GS	SCREW, w/Lock Washer	51	92665GS	INSULATION
17	B4206GS	MUFFLER	52	48031CGS	CLAMP, Hose Band
18	83083GS	SCREEN, Spark Arrest	53	189133GS	VALVE, Fuel (Includes Item 54)
19	43107GS	SCREW	54	189759GS	KIT, Fuel Valve Repair
20	NSP	ASSY,Alternator (see page 6)	55	189568GS	CLAMP, Hose Band
21	96796GS	WASHER	56	193426GS	HOSE, Fuel
22	187365JGS	SCREW	57	85000GS	CLIP, Insulation
23	186347GS	COVER, Bearing Carrier	900	NSP	ENGINE
24	26850GS	WASHER			
25	85652GS	MOUNT,Vibration			
26	74908GS	SCREW			
27	14353621GS	WIRE, Ground			
28	86494GS	SCREW,Wing			
29	86292GS	SCREW			
30	23762GS	WASHER			
31	191436GS	DECAL, Hot Muffler			
32	B4986GS	DECAL, Ground			
33	193157GS	HARNESS, Wire, Power			
34	192830GS	ASSY, Control Panel (see page 7)			
35	J192983GS	SHIELD, Heat			

Parts Not Illustrated


43438GS	PLUG, 250V 30A, 4 Prong
37806GS	PLUG, 125V 30A, 3 Prong
BB3061BGS	OIL, Bottle
65787GS	CABLE, Battery Charge
MS6669	MANUAL, Engine
192993GS	MANUAL, Owner's
193168GS	MANUAL, Illustrated Parts List
193433GS	SHEET, Instruction, Wheel Kit
193412GS	KIT, Decals

EXPLODED VIEW AND PARTS LIST - ALTERNATOR

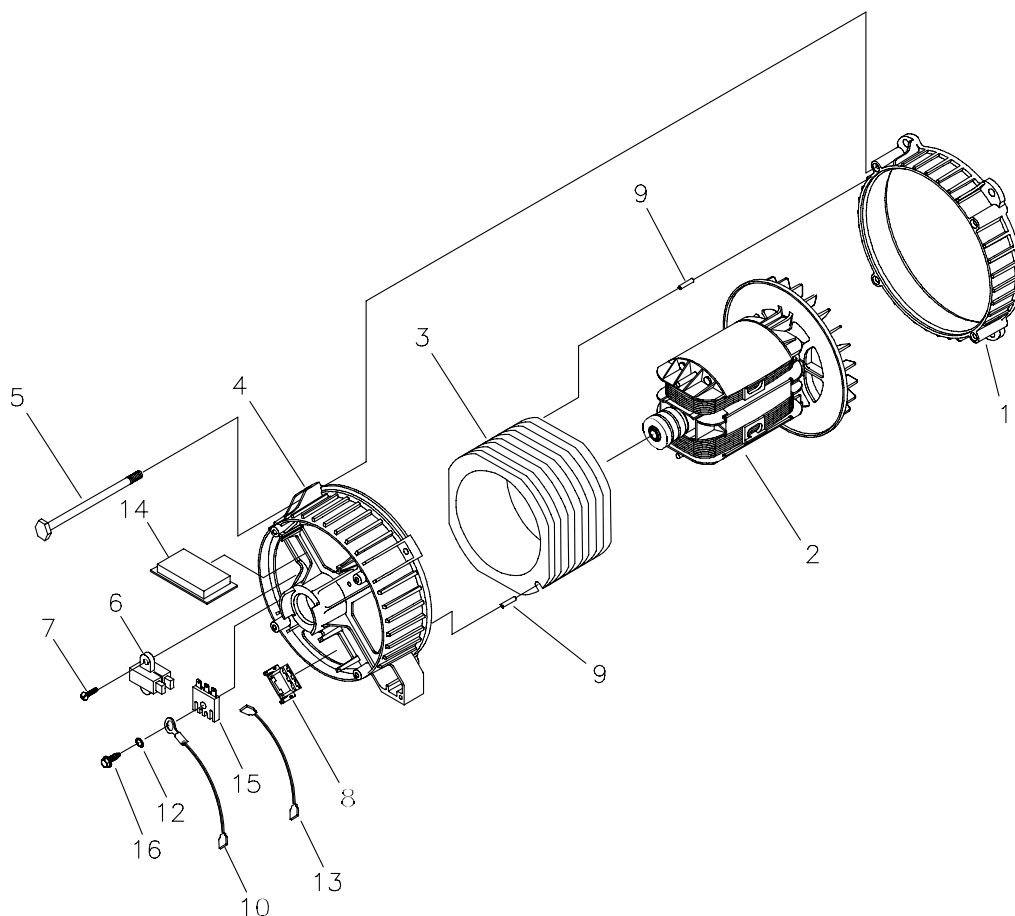

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	192919GS	ROTOR
3	192920AGS	STATOR
4	193336GS	RBC, (with O-Ring, p/n 189197GS)
5	86308HGS	SCREW
6	66386GS	ASSY, Holder, Brush
7	66849GS	SCREW
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll
10	191051AGS	ASSY, Wire, Ground
12	23762GS	WASHER
13	192403XGS	WIRE, Ground
14	189769GS	REGULATOR, Voltage, AVR
15	65795GS	RECTIFIER
16	66849AGS	SCREW

EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

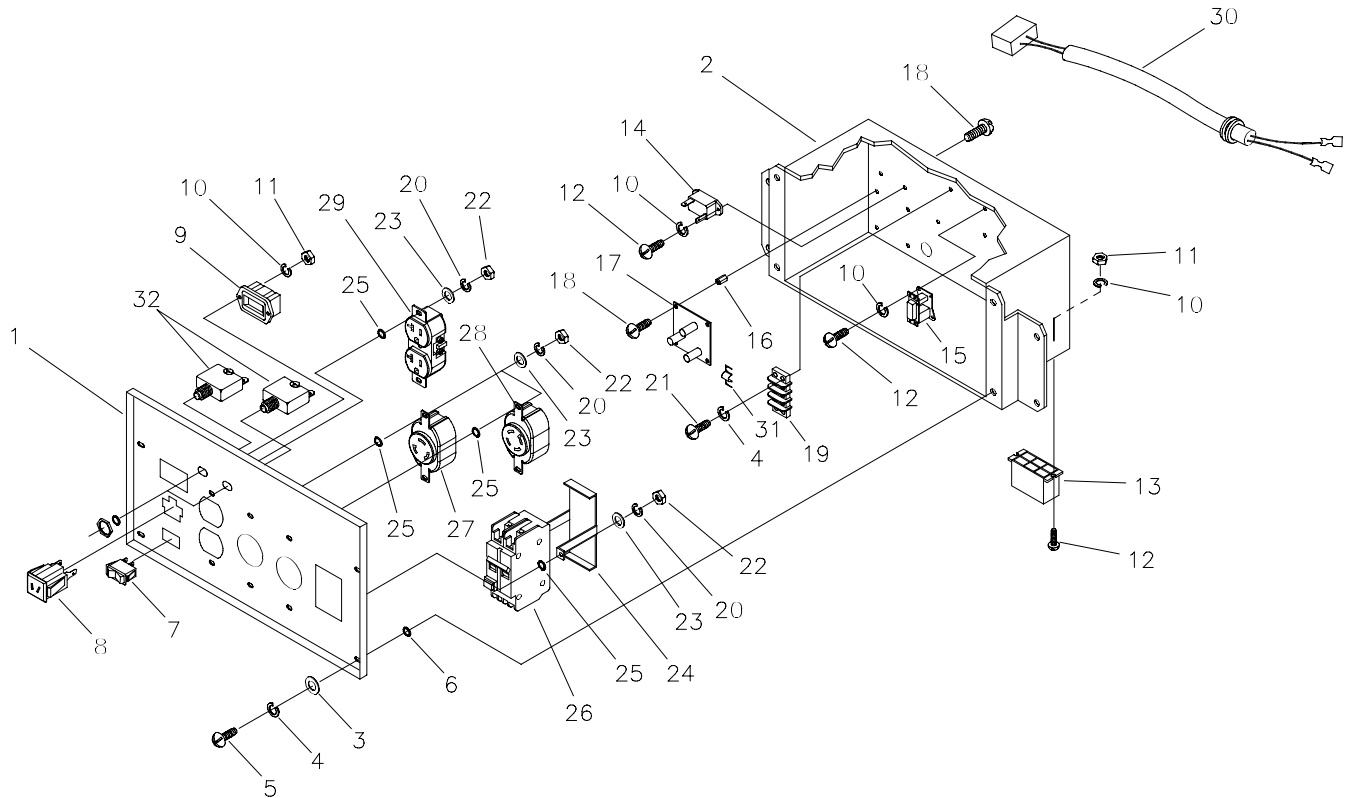

Item	Part #	Description
1	B192833GS	PANEL, Control
2	B192836GS	BOX, Control Panel
3	23897GS	WASHER
4	49226GS	WASHER, Lock
5	91526GS	SCREW
6	22447GS	WASHER
7	82538GS	SWITCH, Rocker
8	90418GS	OUTLET, 12VDC, Snap
9	77604GS	METER, Hour
10	43182GS	WASHER, Lock
11	51714GS	NUT
12	43181GS	SCREW
13	22694GS	HOUSING, Receptacle
14	87962GS	BREAKER, Circuit
15	84028GS	TRANSFORMER, Idle Cnt
16	64525GS	STANDOFF, Hex

Item	Part #	Description
17	193363GS	PCB, Idle Control
18	64526GS	SCREW
19	193077GS	STRIP, Terminal
20	22264GS	WASHER, Lock
21	75477GS	SCREW
22	51715GS	NUT
23	43180GS	WASHER
24	192931GS	BRACKET, GFCI Breaker
25	23365GS	WASHER
26	192828DGS	BREAKER, Circuit, GFCI
27	68868GS	OUTLET, 120V, 30A
28	43437GS	OUTLET, 120/240V, 30A
29	68759GS	OUTLET, 120V, 20A, Duplex
30	193036GS	HARNESS, Wire
31	193095GS	JUMPER, Terminal Block
32	75207GS	BREAKER, Circuit

NOTES